


MODEL : HAM-201

HOW TO SET HAM BAND MODE OR CB FULL BAND MODE

Downloaded from [www.cbradio.nl](http://www.cbradio.nl)

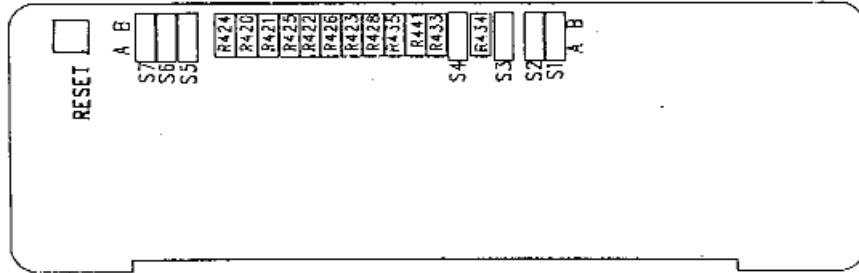

	MODE	CONNECTION	FREQUENCY RANGE
1	HAM BAND ONLY	OPEN : S1, S2, S3 SHORT : S4, S5, S6, S7	HAM : 28.000 - 29.699MHz
2	HAM PRIORITY	SHORT : S1, S2, S3 OPEN : S4, S5, S6, S7 R435 : OPEN R441 : 1 Mohm	HAM : 28.000 - 29.699MHz CB 454CH : 25.165 - 29.699MHz
3	CB PRIORITY	SHORT : S1, S2, S3 OPEN : S4, S5, S6, S7 R435 : 10 Kohm R441 : OPEN	CB 454CH : 25.165 - 29.699MHz HAM : 28.000 - 29.699MHz
4	CB 40CH ONLY	OPEN : S1, S2, S3 SHORT : S4, S5, S6, S7 R435 : 10 Kohm R441 : OPEN R423 : 10 Kohm R428 : OPEN	CB 40CH : 26.965 - 27.405MHz

## CHANNEL EXPANSION AE-201.

1. REMOVE THE BATTERY PACK FROM UNIT.
2. CHANGE(MODIFICATION) CONNECTION AS PER THE ABOVE TABLE AND PCB DRAWING.
3. RESET : MAKE A SHORT CIRCUIT BETWEEN RESET AND GROUND.
4. INSTAL THE BATTERY PACK TO THE UNIT AND POWER ON. THEN HAM BAND OR CB BAND WILL BE DISPALYED.
5. PRESS "FUNC" SIMPLAY AND THEN PRESS "CALL" FOR MORE THAN 3SEC. THEN THE UNIT BECOME CB BAND OR HAM BAND.

### NOTE CB BAND MODE

PRESS "FUNC" BUTTON SIMPLAY AND THEN PRESS CALL FOR LISS THAN 1SEC TO CONVERT TO FREQUENCY READ OUT OR CHNNEL READ OUT.

6. "CALL" BUTTON  
HAM BAND MODE : CALL BUTTON.  
CB BAND (454CID) MODE : BAND SWITCH (BAND NUMBER A - J)