

JOKER TK-308 AUTO MOBILE CB RADIO



POCC MY.MJ10.B01999



Win-Win



Modification

MADE IN MALAYSIA

Downloaded from www.cbradio.nl

JOKER TK-308 AUTO

MOBILE CB RADIO

SPECIFIC FUNCTIONS(E market only)

1.SPREAD FUNCTION

Conventional Mode: Radio works only at D band.


Spread Mode: Radio works at six bands altogether: A, B, C, D, E, and F, each band with 45 channels. Frequency range: 25.615-28.305MHz.

• How to enter spread function

Simultaneously press and hold "DW+CH9" keys, and switch on the power, "45" indicator light lights then radio gets into spread mode. Again simultaneously press and hold "DW+CH9" keys, and switch on the power, "45" indicator light dies then radio gets into conventional mode. Repeatedly operate to switched radio work between conventional mode and spread mode.

Note: When the radio works in spread mode, key functions and operations subject to the statement as follows, the ones not mentioned here keep same functions and operating characters in conventional mode.

• Keybutton function and operation manual

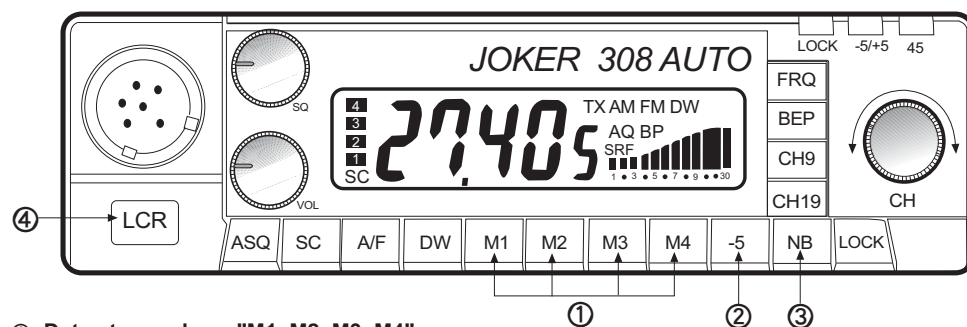

① Data storage keys "M1, M2, M3, M4"

Default: M1 stores channel no. "1d"; M2 stores channel no. "9d"; M3 stores channel no. "19d"; M4 stores channel no. "40d"; It also will save the latest stored data even when the electricity supply is cut off. The two modes, conventional mode and spread mode can save relevant data and situation respectively.

② RU/EU switching key "-5"

Repeatedly press "-5" key, the radio receiving/transmitting frequency can be switched in RU/EU system. "-5/+5" indicator red and green light lights together, the radio is in RU system. The frequency range is 26.960-27.400MHz; "-5/+5" indicator green light lights, the radio is in EU system.

The frequency range is 26.965-27.405. No matter use which system, the two systems will use together the data stored in "M1-M4".

③ Band switching key "NB"

Repeatedly press the key, the radio will switch among A-F. The band will indicate on the LCD. To communicate, press "NB" key to select the desired band and then turn "CH" knob to select the final desired channel. Frequency ranges on each band are shown on technical specification.

④ Quickly return Conventional Mode Key "LCR"

When the radio is in spread function, press this key, It can return conventional mode quickly.

Note: After return to conventional mode, all keybuttons will resume conventional operation!

• Displace



"27.405 or 40d" Frequency or channel no. displaying area

If it displays "40d", it is on the 40th channel of frequency band d, and its frequency is 27.405 MHz.

If the radio is selected to display frequency mode, it has not channel indication.

2.RESTORATION OPERATION

Simultaneously press and hold "DW+M4", and switch on the power, release until screen has displayed all the display dots, and radio gets into conventional mode. After restoration, all the data stored in conventional mode and spread mode will restore as the data setting when out of factory.

Note: The working mode of the radio normally turned on subjects to the state that the radio is turned off last time.